HMUH4

Heatmiser 4 Zone Underfloor Wiring Center



 
heatmiser

Technical Specification

Number of heating zones: 4 Number of Hot Water Zones: 1 Neon Indication: Y DIN Rail Mounting: Y Supply: 230v AC 50Hz Relay Load Max: 3 Amp Resistive Total Load Max: 5 Amp Resistive IP Protection: IP20 Installed Dimensions (L,H,D): 384 x 148 x 60mm Weight: 800g







Warranty Download the latest warranty statement

Features

The HMUH4 is an 4 Zone wiring centre for use with Heatmiser Neo thermostats. It can control any actuator or valve which requires a 230v AC signal while offering the ability to operate a boiler or other heat source through a volt free output. Additional outputs designed for use with underfloor heating systems are also included as standard. These are the pump and valve outputs which would normally operate a manifold pump or a manifold valve. Zone 4 can be used as an isolated radiator zone by using the UFH/RAD switch.

If the switch is set to RAD; When zone 4 calls for heat this will provide an output to a radiator zone valve and the boiler, but WILL NOT enable the underfloor heating pump/valve output.

If the switch is set to UFH; When Zone 4 calls for heat, this will act as an underfloor heating zone, by enabling the actuator, boiler and pump/valve outputs. Any output which is not needed can be ignored

