



How To: FWK0600 handle removal/tightening + cartridge change

1. Unscrew pin handle from base and undo grub screw underneath, remove handle cap

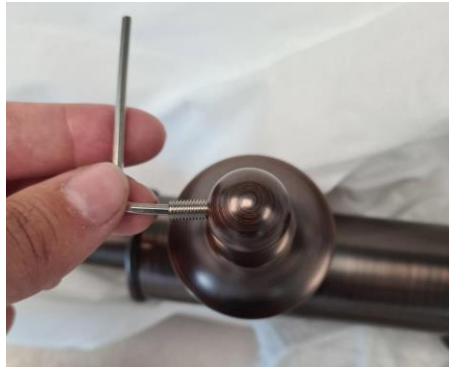

2. Undo the finishing cap, and undo the grub screw located on the underside of the brass stem – remove stem from cartridge (photo 3)

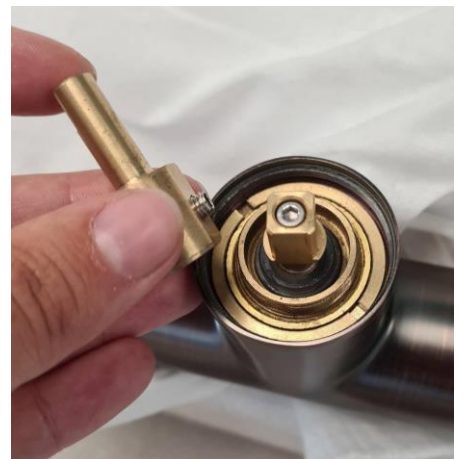

3. Remove brass locking nut that holds cartridge in place (it is threaded, but has flat edges to allow for removal by shifting spanner) – you should now be able to remove the cartridge.



Note: if tightening handle only, follow steps 1-2 for the different components that would need adjusting