

Install the Hydrolink Mobile app from the google play store

Turn the device on with a long press (about 3 seconds), the same long press will turn the device off

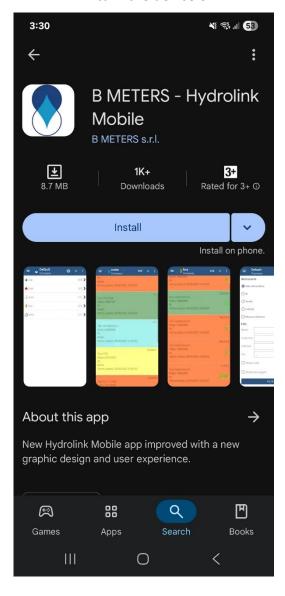


To put the device in pairing mode, hold the power button down for 10 seconds. The Bluetooth LED will flash blue. Click the headphones icon

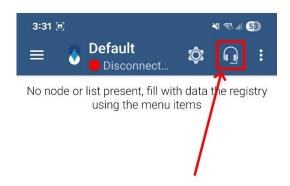


0

Click allow to any permissions the app requests

Click RFM-RBT2

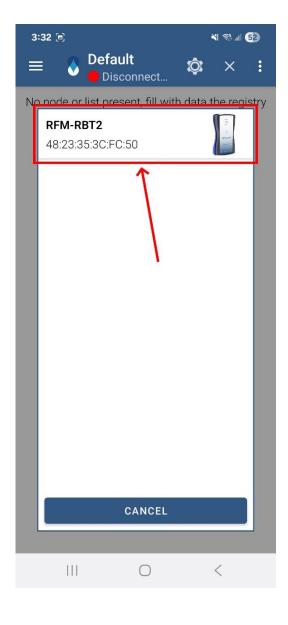

The pin for the Bluetooth pairing request is '123456'

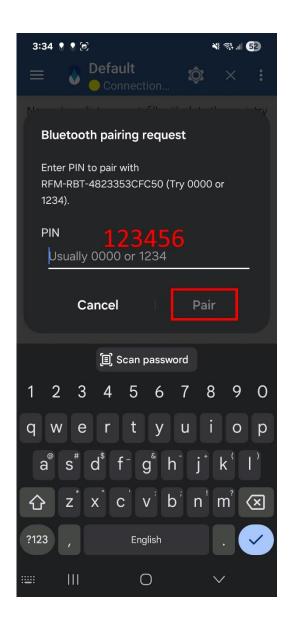


To change the read frequency (depends what meters are installed on site)

click the 3 bars on the top left




Click 'RFM-RBT2'

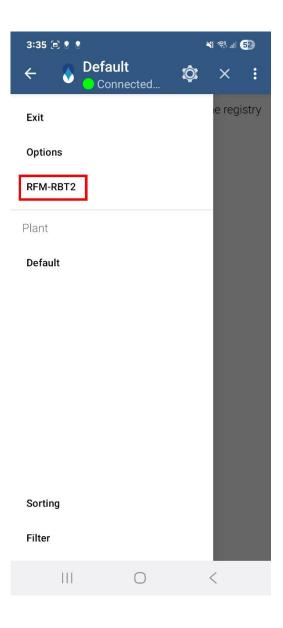

Under current frequency you can select the desired MHz range

Click the save icon to the right and close

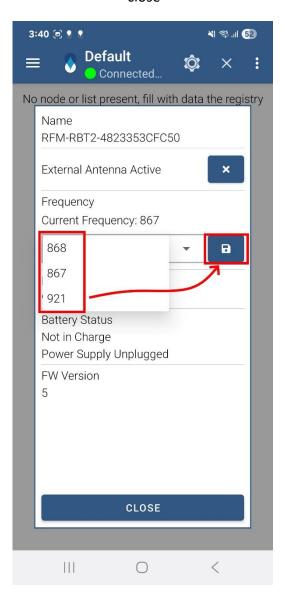

To load a list:


Click the 3 dots on the top right corner



No node or list present, fill with data the registry using the menu items

111

Name the list and click 'OK'

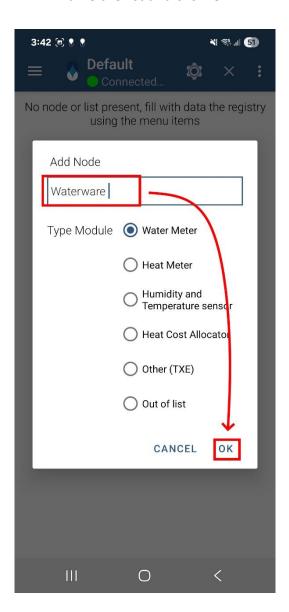

Click on the list that you have created




Click on the 3 dots on the top right corner



No module present Import modules from the catch-all list, from a 15t file or add modules manually

Click 'Import List'

Locate the read list on your device and import the list

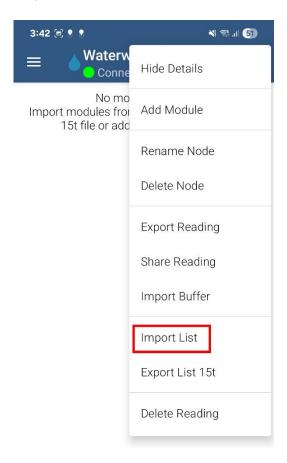




0

To save the reading:


Once the data has been collected click the 3 dots in the top right corner

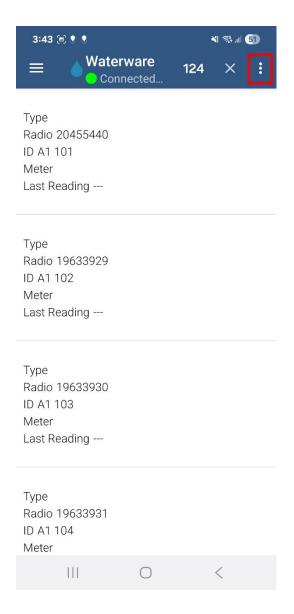

click 'Export Reading' and save the .CSV to the device

Or

Click 'Share Reading' and send the data to another device

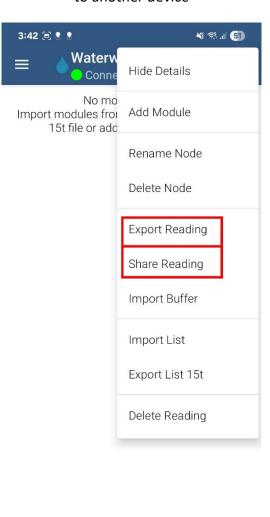


111


When prompted to also export the buffer of the out of list devices click 'NO'




In some cases (usually older installations of water meters) the user must set the AES Key

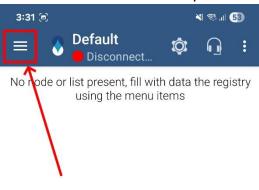


| | |

 

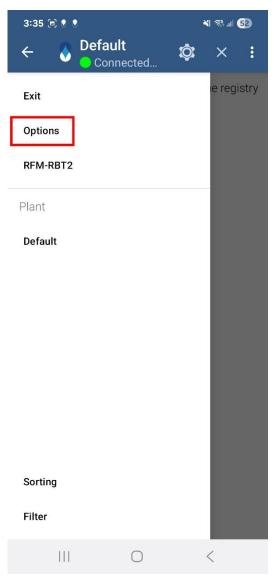



Click 'Options' again

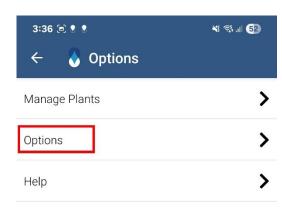

|||

Click 'AES Keys'

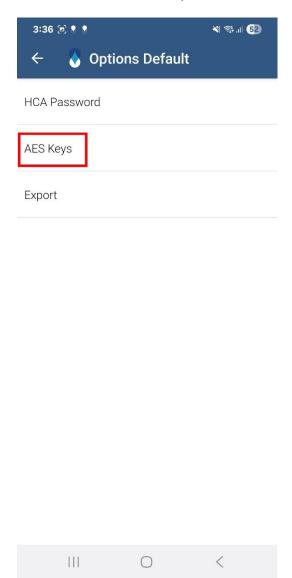

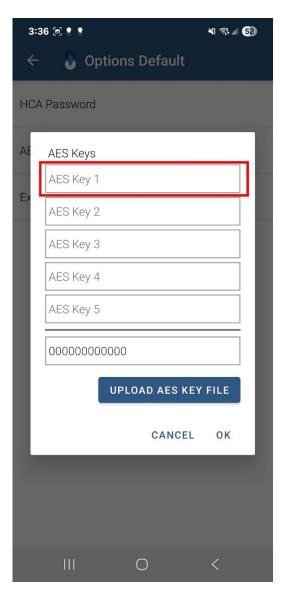

Click 'OK'

