

QUICK GUIDE


HPRPD5 Dual entry cylinder with Recirculation Loop (ring main) configuration

The following guide, shows the recommended method in configuring the HPRPD5 Ritter R290 Hotwater heatpump to a standard hot water cylinder, with LH and RH cold water inlets.



Creating Probe Pocket

1

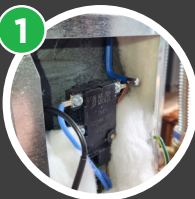


Recommended method to mount the DHW probe:
Use a 6mm allen key to create a well against the inside skin of the cylinder.

2



Push the allen key up to create a well 75mm long, vertically above the element housing.

3

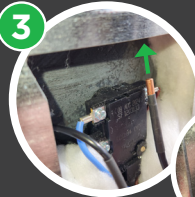


Thread the DHW probe through the cable gland and push into the well. Replace insulation wool.




KEY

1. Ritter R290 heatpump unit
2. Heat exchanger
3. Pump
4. Controller
5. Terminal Connections
6. Hotwater Outlet
7. Probe Pocket
8. Electric Element
9. Probe - supplied in unit**
10. Cold Water Inlet
11. Heat Pump Return
12. Heat Pump Flow

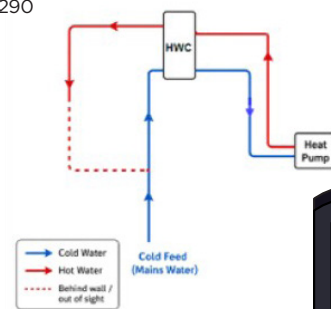

**Located beside the circulation pump, behind the terminal housing; hook the probe out before installation.

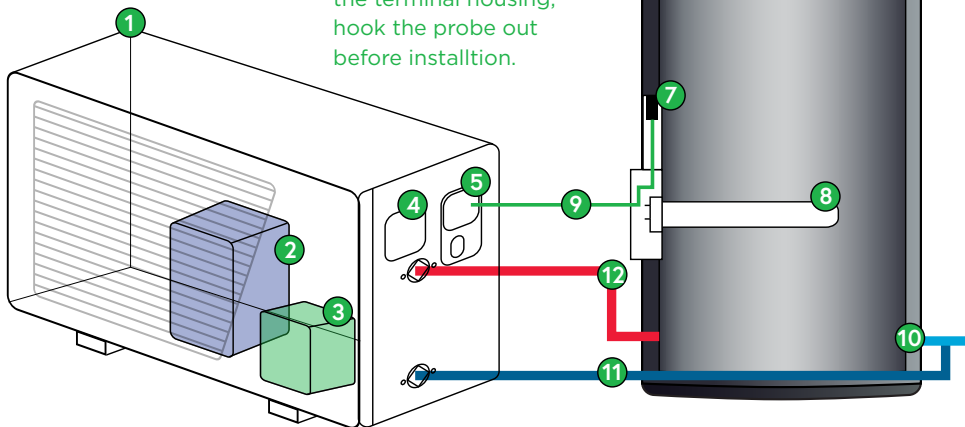


HPRPD5 Solar direct cylinder configuration (Recommended)



RITTER
HOT WATER SK

1. Ritter R290 heatpump unit
2. Heat exchanger
3. Pump
4. Controller
5. Terminal Connections
6. Hotwater Outlet
7. Anode Rod
8. Electric Element
9. Probe - supplied in unit**
10. Cold Water Inlet
11. Heat Pump Return
12. Heat Pump Flow

******Located beside the circulation pump, behind the terminal housing; hook the probe out before installtion.

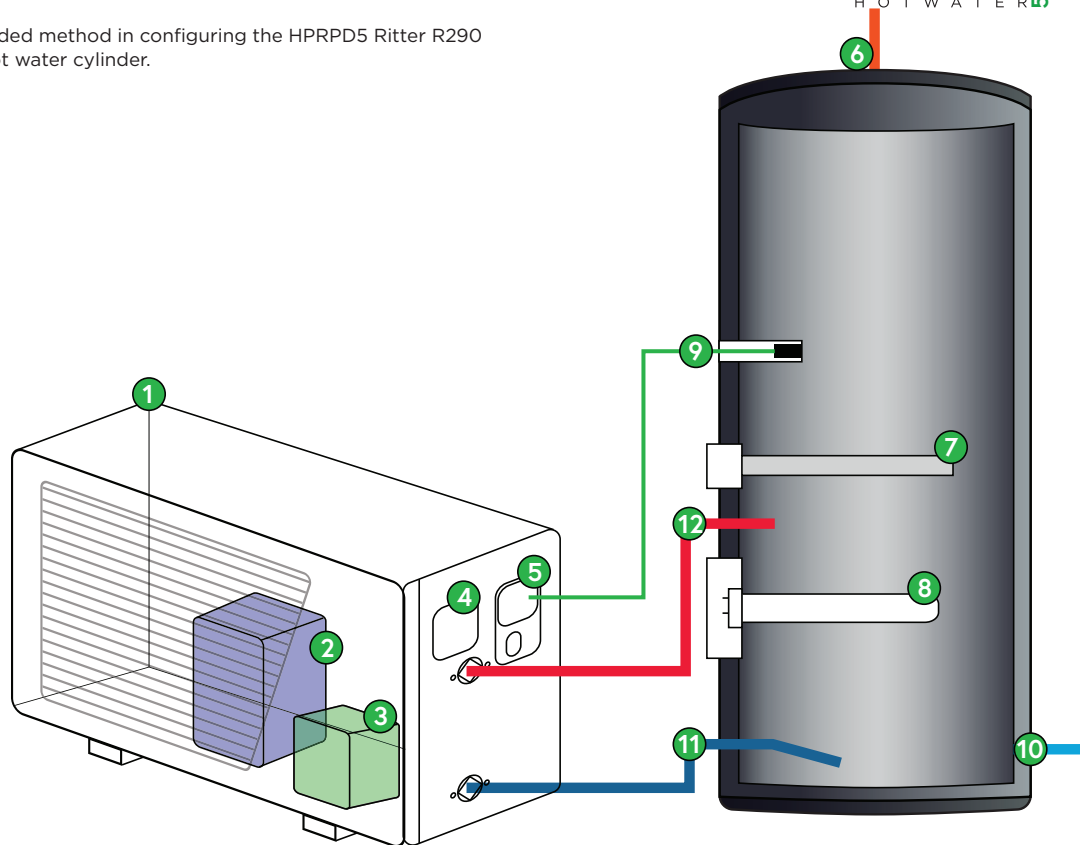

QUICK GUIDE

HPRPD5 Conventional Electric HWC/Protank⁺ cylinder configuration



The following guide, shows the recommended method in configuring the HPRPD5 Ritter R290 Hotwater heatpump to a standard hot water cylinder.

Creating Probe Pocket



Recommended method to mount the DHW probe:
Use a 6mm allen key to create a well against the inside skin of the cylinder.



Push the allen key up to create a well 75mm long, vertically above the element housing.




Thread the DHW probe through the cable gland and push into the well.

KEY

- 1. Ritter R290 heatpump unit
- 2. Heat exchanger
- 3. Pump
- 4. Controller
- 5. Terminal Connections
- 6. Hotwater Cylinder
- 7. Probe Pocket

- 8. Electric Element
- 9. Probe - supplied in unit**
- 10. Valve block
- 11. Heat Pump Return
- 12. Heat Pump Flow
- 13. TPR with tee
- 14. CWE with tee

****Located beside the circulation pump, behind the terminal housing; hook the probe out before installation.**

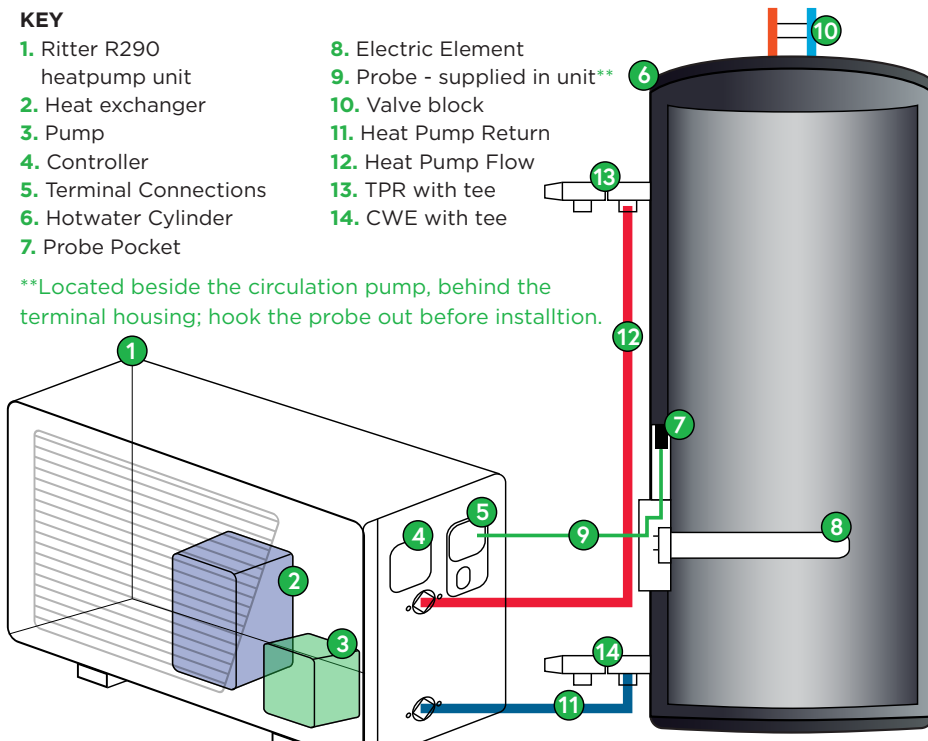

QUICK GUIDE


Your Ritter
R290 Hotwater
Controls

HPRPD5 Configuration

Compensating the probe reading:

After the cylinder has reached set point, draw water off the TPR & measure it's temperature.

Adjust parameter P26 value so the stated tank temperature matches the water temperature from the TPR.

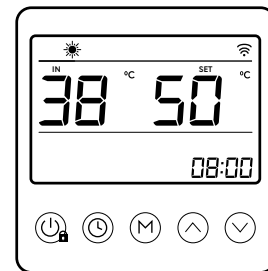

1. If the padlock is displayed on the display press the power button for 5s to unlock



2. Press and hold the menu button for 10s to enter the L menu



3. Press and hold the menu button again for 10s to enter the P menu



4. Press the up button to navigate to P26



5. Press the M button to navigate to the P26 value



6. Press the up button to adjust the value to the required value



7. Press the M button to save the value



8. Press the power button to return to the main menu

Circulation pump behaviour:

Adjust parameter P14 to 1, this triggers the change from continuous pump operation to the pump runs on demand.



1. If the padlock is displayed on the display press the power button for 5s to unlock



2. Press and hold the menu button for 10s to enter the L menu



3. Press and hold the menu button again for 10s to enter the P menu



4. Press the up button to navigate to P14



5. Press the M button to navigate to the P14 value



6. Press the up button to adjust the value to 1 to stop pump running continuously



7. Press the M button to save the value



8. Press the power button to return to the main menu

Adjusting the reheat trigger:

Adjust parameter L17 to 4°C, this triggers the HP to start recovering the tank @ 56°C (60-4°C)



1. If the padlock is displayed on the display press the power button for 5s to unlock



2. Press and hold the menu button for 10s to enter the L menu



3. Press the up button to navigate to L17



4. Press the M button to navigate to the L17 value



5. Press the up button to adjust the value to 4



6. Press the M button to save the value



7. Press the power button to return to the main menu