



Install the Hydrolink Mobile app from the google play store

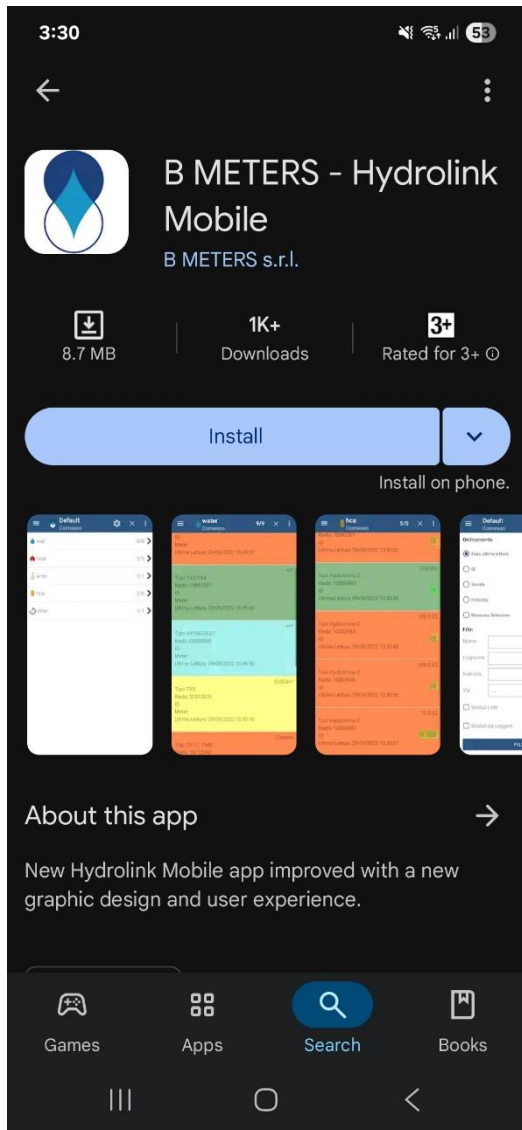


Turn the device on with a long press (about 3 seconds), the same long press will turn the device off
Click the headphones icon

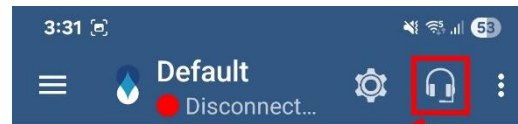


No node or list present, fill with data the registry using the menu items

Click allow to any permissions the app requests

Click RFM-RBT2

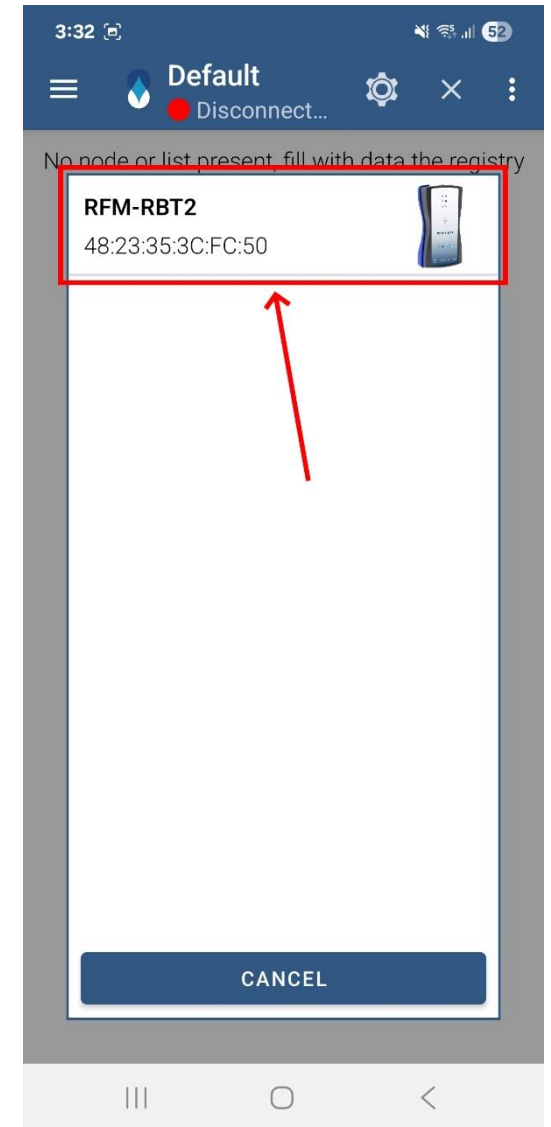


The pin for the Bluetooth pairing request is '123456'

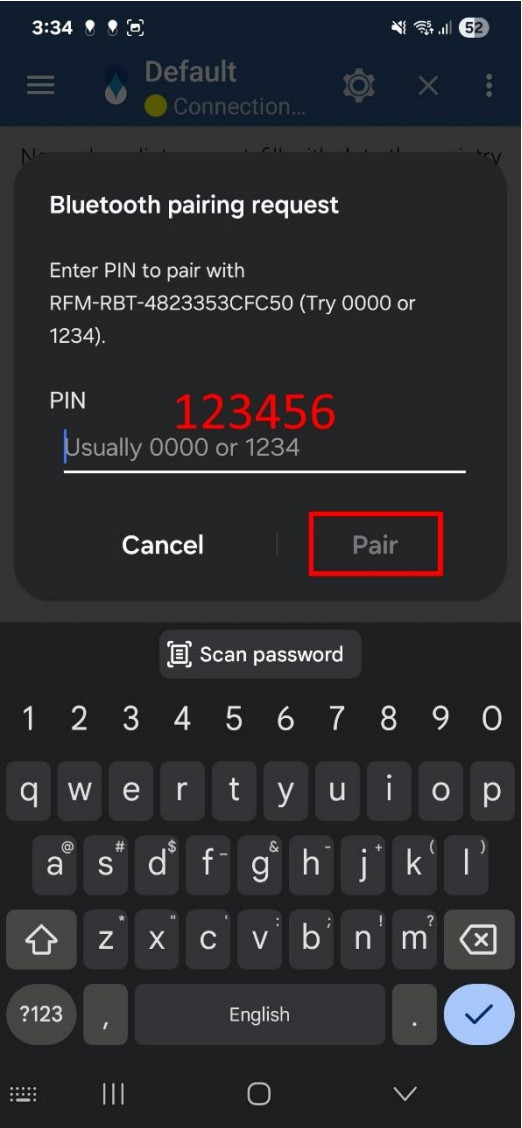


The user must set the AES Key
click the 3 bars on the top left




Click 'Options'

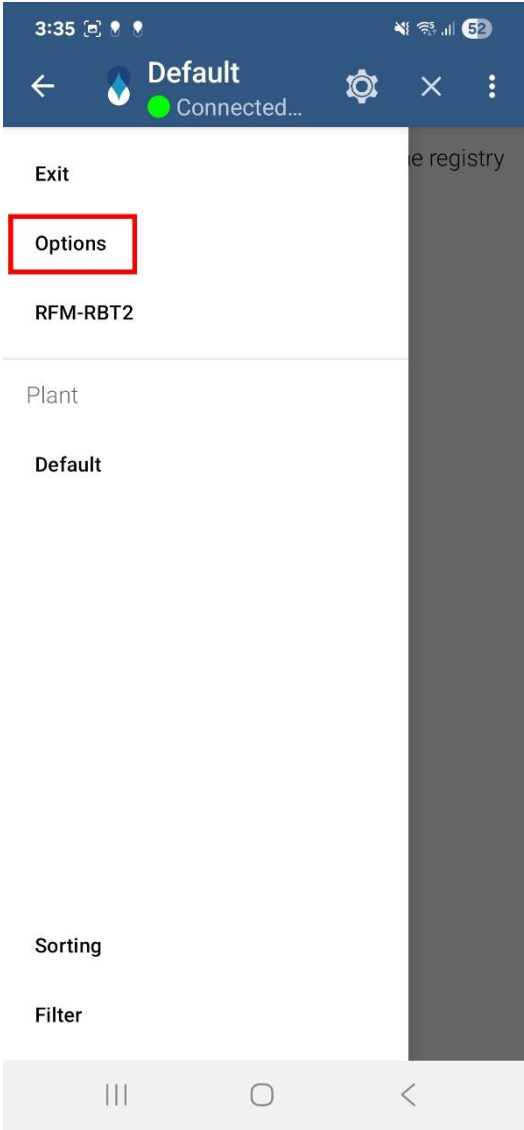


Click 'Options' again

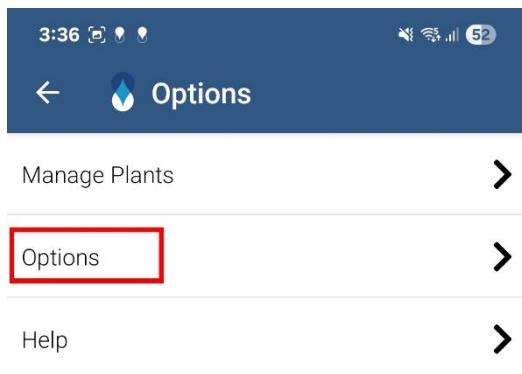

Click 'AES Keys'

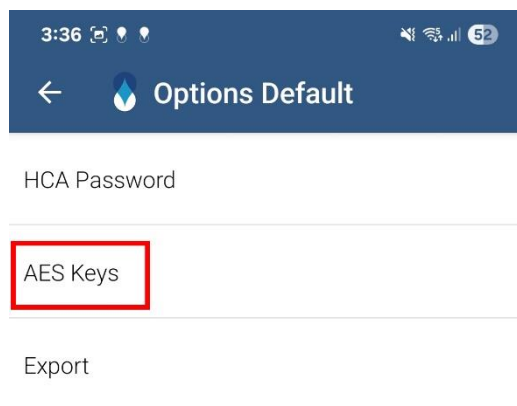

Click 'AES Key 1' and type
'00000000000000000000000000000000'
(32x 0's)

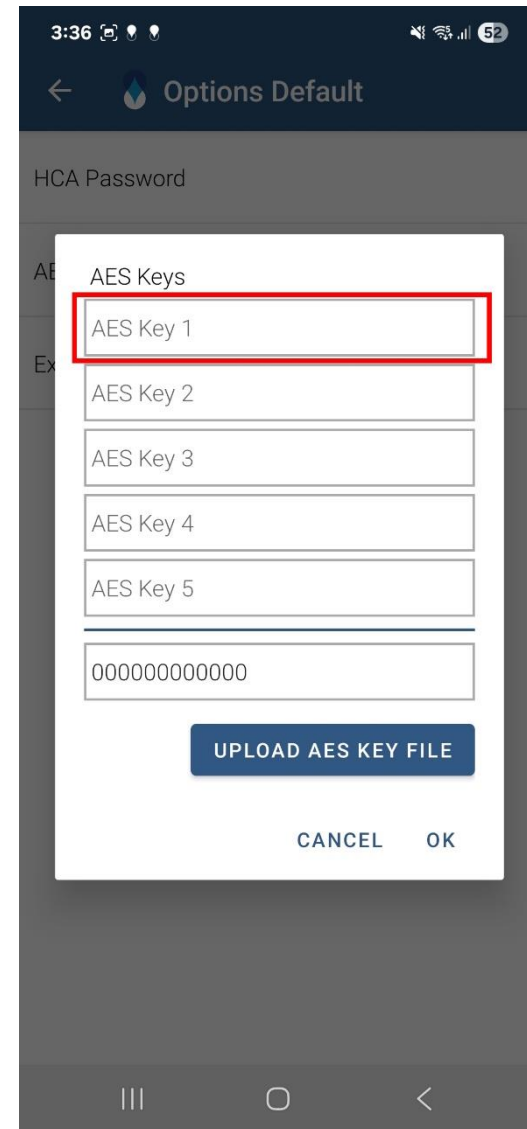

Click 'OK'

Options Default

HCA Password

AES Keys

00000000000000000000000000000000

AES Key 2

AES Key 3

AES Key 4

AES Key 5

000000000000

UPLOAD AES KEY FILE

CANCEL OK

To change the read frequency (depends
what meters are installed on site)

click the 3 bars on the top left

3:31

Default

Disconnect...

No node or list present, fill with data the registry using the menu items

Click 'RFM-RBT2'

3:35

Default

Connected...

Exit

Options

RFM-RBT2

Plant


Default

Sorting

Filter

Under current frequency you can select the desired MHz range

Click the save icon to the right and close

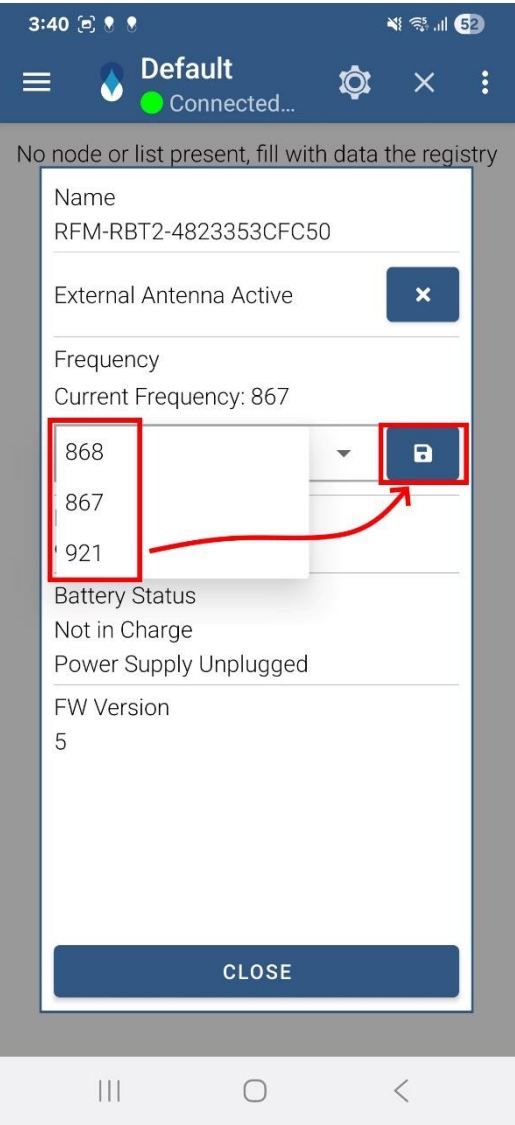


To load a list:

Click the 3 dots on the top right corner




Name the list and click 'OK'

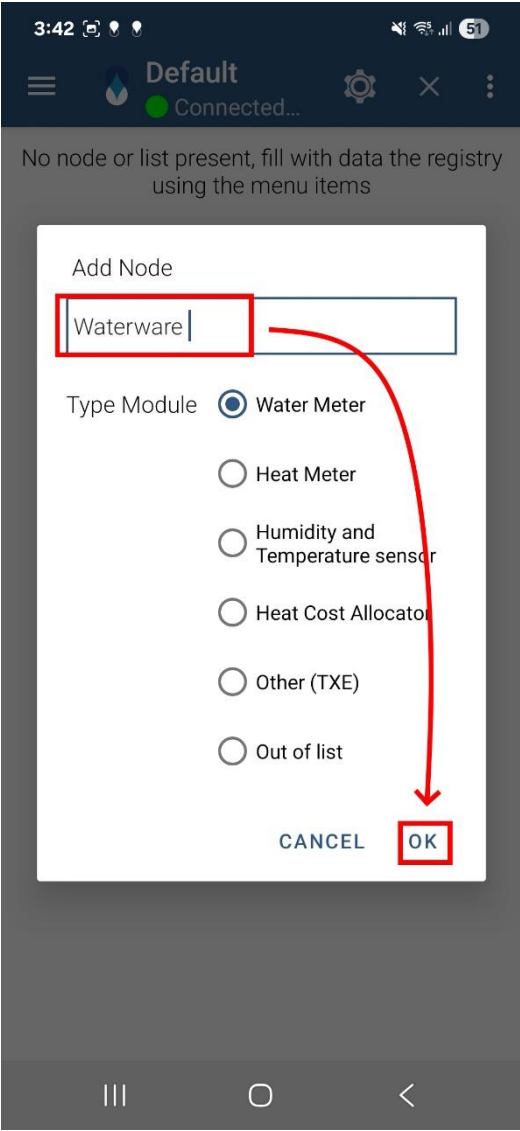

Click on the list that you have created




Click on the 3 dots on the top right corner

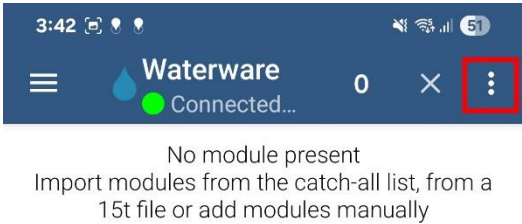


Click 'Import List'

Locate the read list on your device and import the list

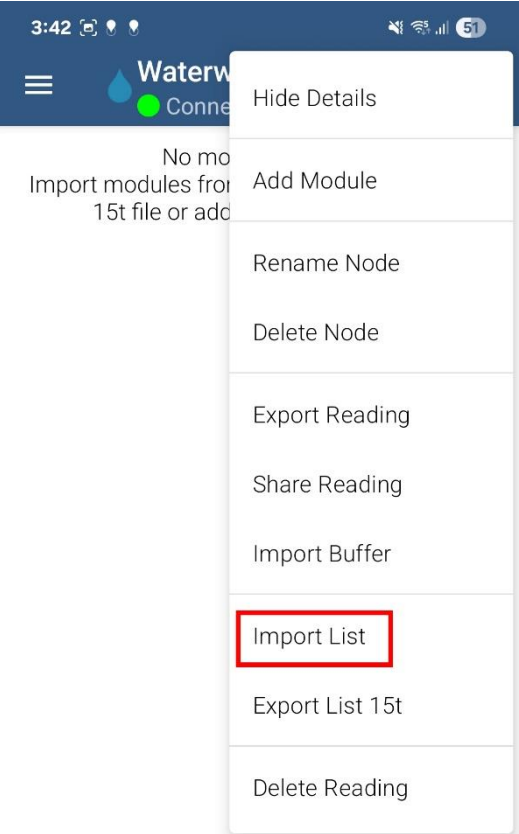

To save the reading:

Once the data has been collected click the 3 dots in the top right corner

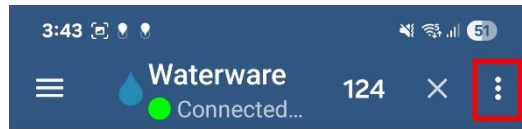

Type
Radio 20455440
ID A1 101
Meter
Last Reading ---

Type
Radio 19633929
ID A1 102
Meter
Last Reading ---


Type
Radio 19633930
ID A1 103
Meter
Last Reading ---

Type
Radio 19633931
ID A1 104
Meter

click 'Export Reading' and save the .CSV to the device

Or

Click 'Share Reading' and send the data to another device

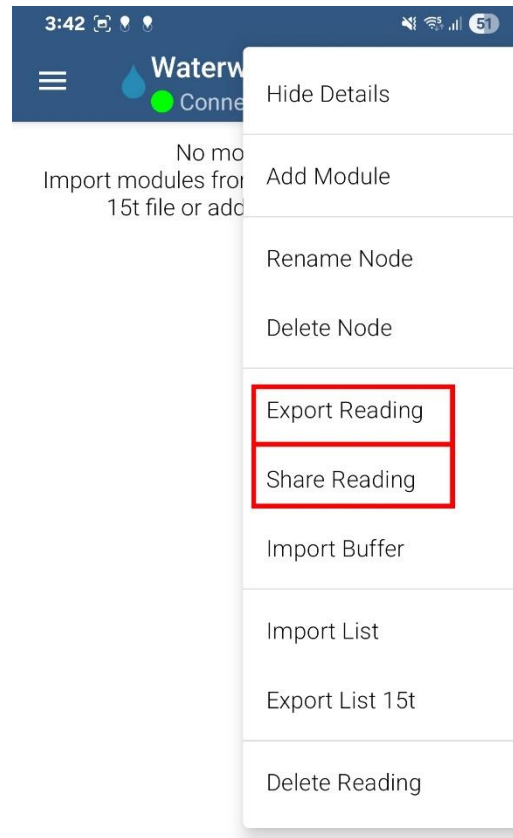

When prompted to also export the buffer of the out of list devices click 'NO'

